


150mm Exhaust fan with Automatic shutter

INSTALLATION DIAGRAMS

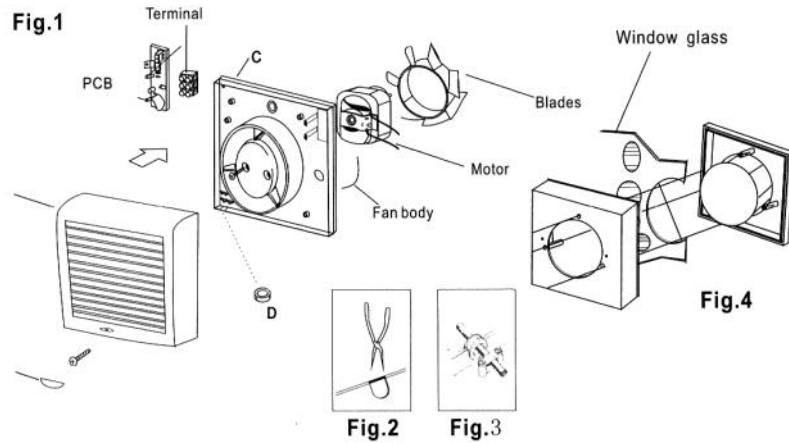

SPECIFICATION

Model	Rated voltage (V/Hz)	Input (W)	Air-Flow (m ³ /h)	Noise (dB)	Size (mm)
VUF150WIN	220-240V~50Hz	25	250	39	150

MAINTENANCE & SERVICE

Before carrying out any maintenance, ensure the power is switched OFF from the mains power supply.

1. Wipe down the fascia and grilles with a wet soapy cloth only. Do not allow water to contact electrical part, such as motor.
2. Never use petrol, benzene, thinner or any other such chemicals for cleaning the ventilating fan.
3. Do not immerse resin parts into hot water over 60°C.
4. Do not place hot objects near or install nearby hot appliances.

IMPORTANT INFORMATION

WARNING: FOR YOUR SAFETY, ALL ELECTRICAL MUST BE CARRIED OUT BY A LICENSED ELECTRICIAN.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Fan must be installed at least 120cm above any hotplate and must have at least 50cm clearance at the rear of the fan blades.


Minimum installation height is 2.1 meters from the floor to the bottom of the exhaust fan.

If the room where the fan is to be installed already contains a stove, water heater or a gas fire, it is essential to ensure that the air supply to the room is enough for both the fan and the combustion appliance.

Please check the appliance that has not been damaged during the transportation.

Check the electrical specifications label corresponds to your electrical supply carefully.

DIMENSION

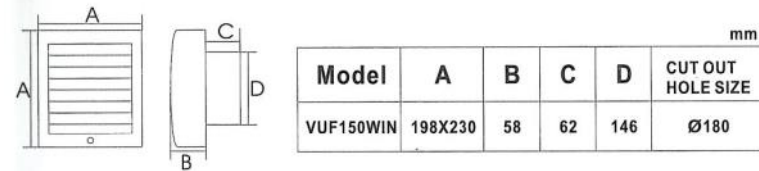

WIRING DIAGRAM

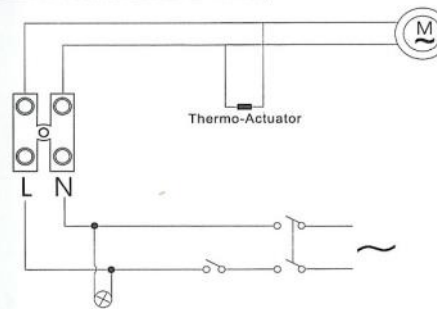


Fig.5